

IPOWERTOWER LEG AND BURNER BUILD



The following is a step by step guide to setup your new **IPOWERTOWER** Cell phone charger system.




1) You should have the item below in your kit.




2) Turn the unit upside down and place the burner on it. You may have to prop the unit against something.




3) Mark 4 holes with pen and drill out with a small drill bit that is smaller than the screws.

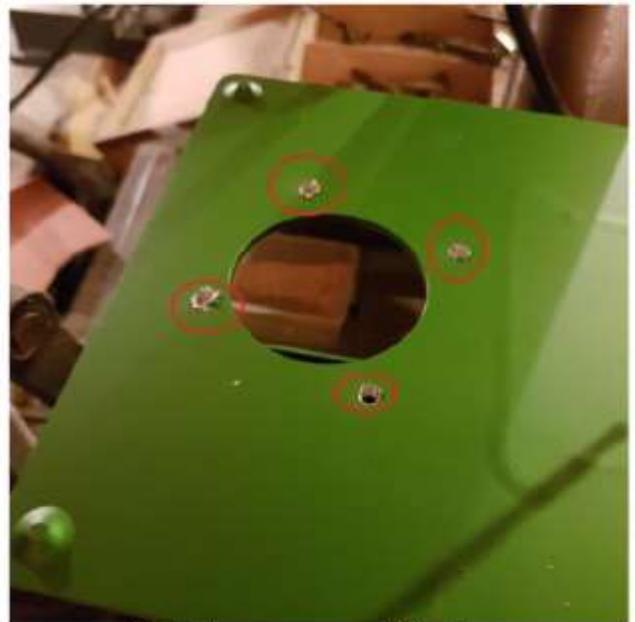

4) Holes are now drilled.

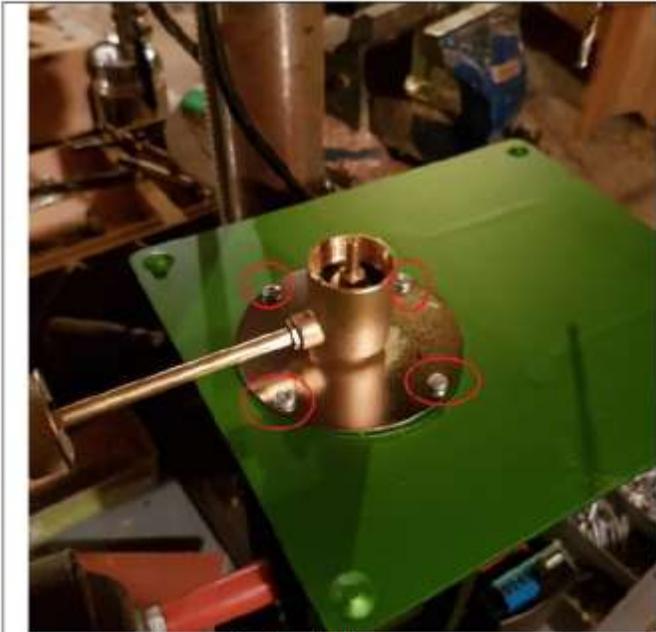

5) Install screws.

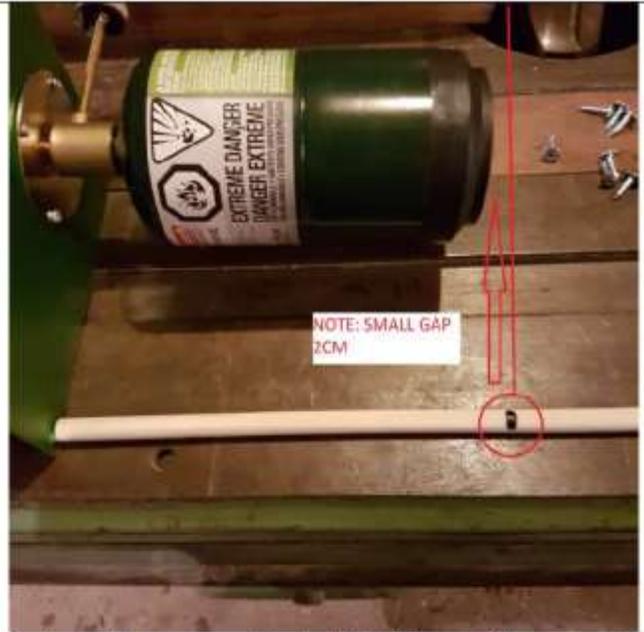

6) Install propane tank. Mark leg with a marker for cutting. Note: There needs to be a small gap between the bottom of the leg and the bottom of the propane tank.



7) Drill hole in the legs.



8) Use a screw driver.

You can also just use 2 legs on the back of the base and allow the Tank as a third leg in the front! Any leg will do self, rock, brick make sure it is stable!




9) Drill out holes for screws and install the legs.



10) Stand the unit upright.



11) Add propane tank.

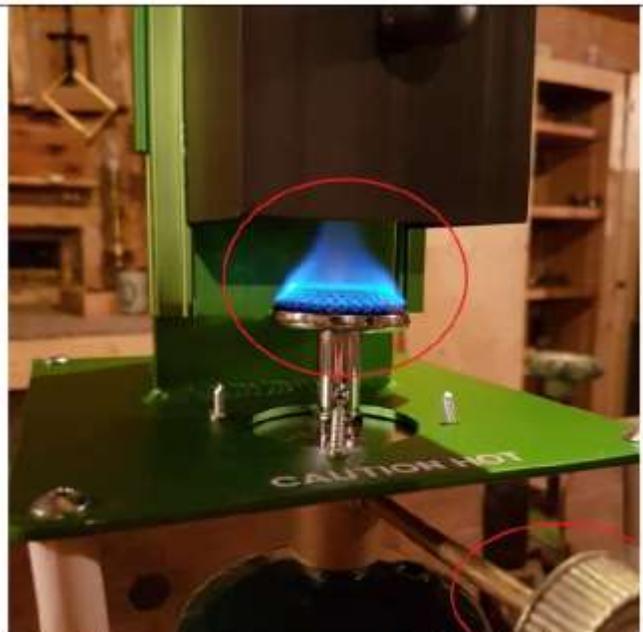

12) Add water to tower past to 5 CM below the top. Then light the burner and have a small flame. Large flames will damage the unit and is not covered under warranty.



12) Move the flame shield down so that the flame is covered for safety reasons.



13) Once the green light is on. Connect your cell phone with its charger cable to the USB port. If you are using an iPhone you will need to use the adapter. *If the phone is not charging then make the flame a bit bigger.*

How to use the Optional Turbo Current Booster USB to USB Connector:

As most are aware Apple uses a proprietary charging technology that doesn't allow generic chargers or cables to charging Apple products. Because the IPOWER TOWER is not made by Apple we have to fool Apple Phones and IPADS into allowing the full charging potential of the IPOWER TOWER. The Turbo Current Boost has built in circuitry that mimics the Apple circuitry allowing 1amp @ 5V

Full charging rate. Simple follow the below directions: ONLY REQUIRED FOR APPLE PRODUCTS.

